



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **PEUGEOT** MOD. **307 - 307 cc** YEAR. **06**

GENERAL CONNECTIONS FOR INSTALLATION

ALARM/SIREN POSITION	Position the modular systems and the modules under the dashboard driver's side. Pass the cables using the original fairlead located behind the servobrake group.
POWER SUPPLY	+30: connect with a ground terminal to the connecting terminal marked "+30" in the feed rod located in the black box on the side of the battery, in the engine compartment. -31: connect with a terminal to the connecting terminal marked "GND" in the feed rod located in the black box on the side of the battery, in the engine compartment.
IGNITION WIRE	+15/54: connect to the 1mm ² LIGHT BLUE wire marked "77C", in the grey connector located inside the tinned box in the engine compartment, driver's side. As alternative: connect to the 1 mm ² LIGHT BLUE wire directly in the wiring harness coming out of the ignition key.
DIRECTION INDICATORS	Connect to the wires at the positions nr.13 and nr.14 in the wiring harness of the 16 way black connector.
IMMOBILISATION POINT	Fuel pump Cut the LIGHT BROWN wire marked nr.1235 in the more little wiring harness located in the posterior part of the driver's side sill cover.
STARTER	+50: Cut the YELLOW wire in the wiring harness coming out of the 3 way connector located on the left of the steering column. Note: It is suggested to verify that the electrical input would be compatible with the product installed, eventually install an additional relay.
BONNET SWITCH	Install an additional switch on the headlamp support plate, driver's side.
DOORS SWITCH	Positive control Connect to the wire in the position nr.32, in the green connector located in the connection with white cover, in the lower part of the fuse box, under the dashboard driver's side.
BOOT SWITCH	Connect to the BLACK wire, at the position nr.16, in the grey connection of the 40 way connector, in the fuse box.

CONNECTIONS FOR ANTITHEFT SYSTEM WITH ORIGINAL EQUIPMENT KEYLESS ENTRY SYSTEM

ACTIVAT./DEACTIVATION CONTROLS

Connections antitheft/vehicle

3868 serie	Vehicle	Position
YELLOW/BLACK	Pin nr.13 and nr.15	16 way grey connector
GREY/BLACK	Pin nr.13	16 way black connector
ORANGE	Pin nr.27	40 way white connector
VIOLET	Pin nr.27	40 way white connector
VIOLET/WHITE	ground	Car body
ORANGE/WHITE	positive	Supply in the fuse box

The connectors are located in the fuse box, under on the left of the driver's side dashboard.


For the **3868 serie** antitheft refer to the following fitting diagram.

For the connection of the **3818 serie** antitheft, the signal for the activat./deactivation is not yet available.

3818 serie
ORANGE

Vehicle
Signal not tested

Position
Signal not tested

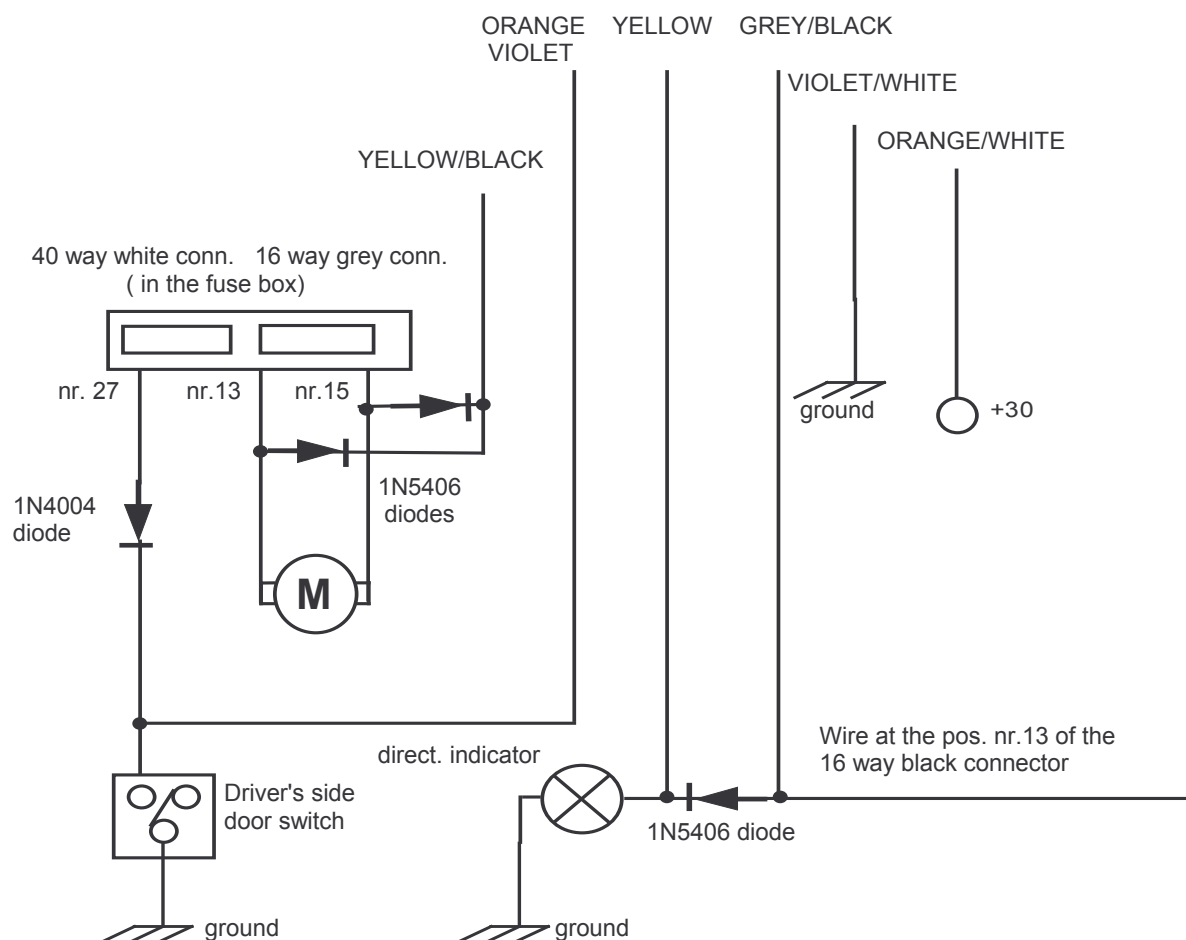

www.cobra.it

CONNECTION FOR COBRA CONNEX SATELLITE ANTITHEFT SYSTEM

GSM ANTENNA POSITION Position the GSM antenna in the upper part of the anterior window, near the rear view mirror.

GPS ANTENNA POSITION Position the GPS antenna in the upper part of the anterior window, near the rear view mirror.

HORN CONTROL **Positive control**
Connect to the 1mm2 LIGHT BLUE marked 2520, in the wiring harness coming out of the connector marked "MARRON" located inside the tinned box in the driver's side engine compartment.

CONNECTION FOR ANTITHEFT SYSTEM CONTROLLED BY RADIO

CENTRAL DOORS LOCKING **Direct control original door motor**
Cut the wires: WHITE (BROWN) at the pos. nr.13 (closing) and BROWN (PINK at the position nr.15 (opening), located in the wiring harness coming out of the 16 way grey connector, in the fuse box.

